

## Quick Programming Guide: For the Midland Model WR-102 Weather/All Hazards Radio

PLEASE READ THIS FIRST

These are abbreviated instructions; please refer to the user manual supplied with your radio for detailed questions or programming instructions. Before you start programming, please read this entire instruction sheet. You will need to determine the County Codes you want to monitor before you start programming the radio. For county codes, refer to the map on the back or call the National Weather Service at 1-800-432-3929 or visit their website at [www.nws.noaa.gov/nwr](http://www.nws.noaa.gov/nwr) and click 'Station Listing and Coverage'.

### Power the Unit

1. Place 3 AA alkaline batteries (not supplied) into the compartment on the underside of radio. (Note: Batteries provide approximately 5 hours of emergency power or 75 hours of standby power for the radio in case of a power outage).
2. Plug the AC Adapter into a standard outlet. Plug the other end of the adapter into the DC jack on the back of the radio.
3. Pull out antenna and extend to its full length.
4. Ensure **ON/OFF** switch is in the **ON** position
5. **WELCOME** will be displayed.

### Set Language:

1. Press **MENU** to open menu options.
2. Press **▲** to scroll through menu to **SET LANGUAGE** then press **SELECT**.
3. Press **▲** to choose "**ENGLISH**", "**ESPANOL**" or "**FRANCAIS**" then press **SELECT**.
4. Press **MENU** to exit menu mode.

### Set Location & S.A.M.E. Codes:

1. Press **MENU** to open menu options.
2. Press **▲** to scroll through menu to **SET LOCATION**, then press **SELECT**.
3. The display can say **ANY**, **SINGLE**, or **MULTIPLE**.
4. Press **▲** to **ANY** if you want to monitor all county codes, **SINGLE** if you want to monitor only one county code, or **MULTIPLE** if you want to monitor more than one county code.
5. Press **SELECT** when your selection is visible.
6. **SAME 01** will be displayed.
7. Press **SELECT**.
8. Use **▶▲▼▶** to program the 6 digit S.A.M.E. code.
9. Press **SELECT**.
10. Press **▲** to advance to **SAME 02**.
11. Repeat steps 7-10 to program up to 25 codes.
12. Press **MENU** to exit menu mode.

**Note:** In the single mode the last S.A.M.E. code programmed will be the only one the radio alerts to, even though multiple codes can be entered in alternate S.A.M.E. positions.

### Set Time:

1. Press **MENU** to open menu options.
2. Press **▲** to scroll through menu to **SET TIME**.
3. Press **SELECT** (hour option will begin flashing)
4. Press **▲** until current hour is displayed.
5. (**Note:** AM/PM changes as you scroll through the hours)
6. Press **▶** to save current hour and advance to minute settings.
7. Program both minute digits the same way.
8. Press **SELECT** to store the current time.
9. Press **MENU** to exit menu mode.

### Set Channel:

1. Press **MENU** to open menu options.
2. Press **▲** to scroll through menu to **SET CHANNEL** then press **SELECT**.
3. Tune the channel to the desired broadcast by using **▲▼**.
4. Adjust the volume by using the **VOLUME UP** or **VOLUME DOWN** button.
5. Press **SELECT**.
6. Press **MENU** to exit menu mode.

### Set Alert Type (Display, Voice or Tone):

1. Press **MENU** to open menu options.
2. Press **▲** to scroll through menu to **ALERT TYPE**, then press **SELECT**.
3. Press **▲** to choose **VOICE**, **TONE** or **DISPLAY** then press **SELECT**.
4. Press **MENU** to exit menu mode.

